



- 4.5.13 Wash the interior of the milker. Be sure that the milk pail does not overflow otherwise the water will go into the vacuum line.
- 4.5.14 Disconnect the vacuum hose.
- 4.5.15 Empty wash water from milk pail in gutter.
- 4.6 Return all pails, milker and hoses to the milk house.
- 4.7 Add dish soap to a bucket of water.
- 4.8 Scrub the exterior of the milker with soapy water.
- 4.9 Rinse the exterior of the milker and attached hoses.
- 4.10 Rinse the long clear plastic hose inside and out.
- 4.11 When washing the lid, avoid the pulsator. DO NOT get the pumping mechanism on the lid wet.
- 4.12